# USB to 1 port RS422/485 converter with Isolation

## 12.02.1004

### **Quick Installation Guide**

#### **Product Specifications**

Communication speed Maximum 115.2K BPS USB Isolation RS422/485 Circuit Protection ESD 15KV Surge Protector attached Supporting operating systems Windows 98/2000/Server 2003/XP/Vista/win 7, Linux 2.4 MAC OS8/9 OS-X USB 1.0/1.1 compliant, USB 2.0 Full Speed compatible

Connector: Terminal Block 5P and Mini USB B type

#### Front View



# How to Connect TB5 RS422/485 Connector



#### Method of Connecting External point-to-point



#### Method of Connecting multidrop



## How to Connect RS485 Connector

The default is non-echo mode.

#### Method of Connecting



RS:120 ohm (if there is not serious noise, it is not required to add termination resistors)

RS485, like LAN, adopts a half-duplex bus where the host is not divided from terminals.

#### SW SETUP

SW	1	2	3	4
	0	0	0 RS422	ONTR
ON=1 OFF=0	Ĩ	ŏ	1 RS422 M RS585 4W	
	<u>Ô</u>	1	0 RS485	5
	0	1	11RS485 ECHO	